





MClimate Multipurpose Button LoRaWAN®

User manual

Scan the QR Code to access MClimate Multipurpose Button LoRaWAN® extended documentation





For more product information and issues related to it, visit: mclimate.eu/lorawan-resources

or write us to: lorawan-support@mclimate.eu

COUSE NOT SET UP: COUNTIES OF SOLUTION COUNTIES OF A COUNTIES OF A

Bulgarian За да разберете как се инсталира MClimate Multipurpose Button LoRaWAN®, сканирайте QR кода или посетете линка до него.

Czech

Chcete-li zjistit, jak nainstalovat MClimate Multipurpose Button LoRaWAN®, prohlédněte si kód QR nebo navštivte odkaz vedle něj.

Italian

Per installare MClimate Multipurpose Button LoRaWAN® scannerizzare il codice QR oppure aprire il link al suo lato.

Swedish

För att ta reda på hur du installerar MClimate Multipurpose Button LoRaWAN®, skanna QR-koden eller besök länken bredvid den.

Polish

Aby dowiedzieć się, jak zainstalować MClimate Multipurpose Button LoRaWAN®, zeskanuj kod QR lub odwiedź link obok niego.

Finnish

Tutustu MClimate Multipurpose Button LoRaWAN®-laitteen asentamiseen, skannaa QR-koodi tai vierailla sen vieressä olevassa linkissä.

German

Um herauszufinden, wie man MClimate Multipurpose Button LoRaWAN® installiert, scannen Sie den QR-Code oder besuchen Sie den Link daneben.

French

Pour savoir comment installer MClimate Button LoRaWAN®, scannez le code QR ou visitez le lien à côté de celui-ci.

Dutch

Om te weten te komen hoe u MClimate Multipurpose Button LoRaWAN® installeert, scan de QR-code of bezoek de link ernaast.

Spanish

Para saber cómo instalar MClimate Multipurpose Button LoRaWAN®, escanee el código QR o visite el enlace al lado.

Table of content

01

What is in the box?

02

Technical details, Safety instructions, Legal Notices & Compatibility 6-7

03

Device Parts, Mechanical dimensions

04

LEDs, button press types and behaviour

10-11

8-9

5

05

Commissioning


14-16

06

Installation

17-18

What's inside the box?

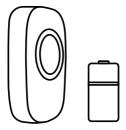

MClimate Multipurpose ER10280 3VDC Button LoRaWAN® battery

Technical specifications

Description: LoRaWAR button with temperature sensor and 3 types of button presses (single, double and triple press) Created by MClimate^{IM} Model: MC-UM-BTH-01 Dimensions: 71 x 41 x 18mm Weight: 26gr Frequency range: 863:870MHz Power supply: xER10280 3VDC battery Sensors: built-in temperature sensor Work temperature: 0° Ct 0 - 50° C Materiat: ABS Environmental conditions, in which the device is intended

to operate:

- Indoor using;
- for altitude up to 2000m;
- for an ambient temperature:0°C to +60°C;
- for maximum relative humidity of 80% for temperature up to 31°C, decreasing linearly to 25% relative humidity at temperature 50°C;
- for environment with a degree of contamination 2 (PD2). Storage and transportation conditions:
- for an ambient temperature :-40°C to +85°C;
- for relative humidity 5% to 90% without condensation
- MClimate Jsc, 1729 Sofia 31, Alexander Malinov Blvd, Building 2, Floor 2

Compliance with the WEEE Directive

The appliance marked with this symbol should not be disposed of with other household waste.

It must be handed over to the relevant collection point for the recycling of electrical and electronic equipment.

Safety Instructions

Please read the safety instructions before installing the device! Failure to follow the recommended instructions in this manual may be dangerous or in violation of the law. The manufacturer MClimate Jsc., is not responsible for any loss or damage caused by failure to follow the instructions in the operating manual. 6

Legal Notices

All information, including but not limited to, features, functionality, and / or other product specifications are subject to change without notice. MClimate retains all rights to review or update its products, software or documentation without being required to notify any natural or legal person. The MClimate and MClimate logo are trademarks of MClimate Isc. All other brands and product names mentioned herein are trademarks of their respective owners

EU Declaration of Conformity


This device complies with the essential requirements and other applicable provisions of the following EU directives:

2014/53/EC. EN 50491-3:2009 FEU 300 220-1 V3.1.1:2017 EN 60950-1:2006+A11:2009 +A1:2010+A12:2011+ A2-2013 + AC-2015 FEU 300 220-2 V3.11:2017, EN 301 489-1 V2.11:2017


Compatibility In order to operate MClimate Multipurpose Button LoRaWAN®, you will need: LoRaWAN® network



Device parts

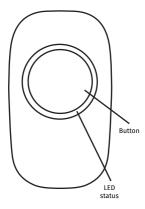


Assembled MClimate Multipurpose Button LoRaWAN®, top view

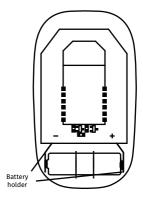


Disassembled MClimate Multipurpose Button LoRaWAN[®], bottom view

LED, Buttons and behaviour

There are three separate types of clicks supported by the button. After each click the button waits for 600ms to check if another click is coming. Once the click type has been determined, the device sends a confirmed uplink with the temperature data and the click type information. Supported click types:

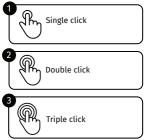

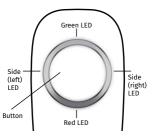

LEDs indications:

- The GREEN LED is activated while the button is pressed

- The side LEDs alternate when the LoRaWAN message is being sent

 The GREEN LED lights up when the uplink is sent and acknowledged by the gateway and LNS
If the message has not been successfully acknowledged, the RED LED activates
If a message is not allowed to be sent at the moment (due to RF duty-cycle restrictions), the RED light activates after you release the button.
If the sensor is NOT connected to a network, then the SIDE and RED LEDs activate.

Commissioning



Before you install the device, we highly recommend that you first commission it on your LNS. Once the battery paper isolator is removed, the device will initiate a LoRaWAN join Procedure on SF9. Please, make sure you enable ADB in your LNS and/or mark the device as static. The lower the spreading factor, the better the performance of the energy storage will

 Open your LoRaWAN® Network provider access panel and add the device using the supplied Serial Number, DevEUI, AppEUI (joinEUI) and AppKey.

DevEUI:	70B3D25D
AppEUI:	70B3D25
AppKey:	A0658DFAE7213



The data is example. Do not use.


2 Continue the Installation with the instructions of your LoRaWAN[®] Network provider.

MClimate_LoRaWAN_51177						
Serial Number	DevEui	AppEui	АррКеу			
Givene second a	706	70B:	64c31 mail mediate files	1764		



Commissioning


Remove the battery paper isolator from the device.

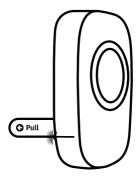

Open the device

If you need to open the device to replace the battery, use the slot indicated in the picture to open the device. Insert the new battery following the direction indicated on the PCB.




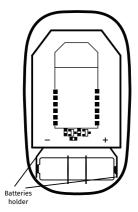


Disassembled MClimate Multipurpose Button LoRaWAN®, top view

Installation

We recommend installing the device in an open environment (e.g. not in a recess) at 1.5m height. Do not install the device near big metal items as it will worsen the RF performance. Use double-sided tape to attach it to the surface.

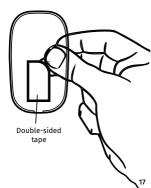

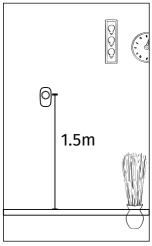



last update: 07.06.2024