



ACS-Report-NOTE®





DEVICE INSTALLATION

POSITIONING

The ACS-Report-NOTE need to be installed according to the arrows on the back of the device.

MOUNTING

The device can be mounted either by screw, by magnet (supplied as an option if necessary) or glued (w/double-sided tape).

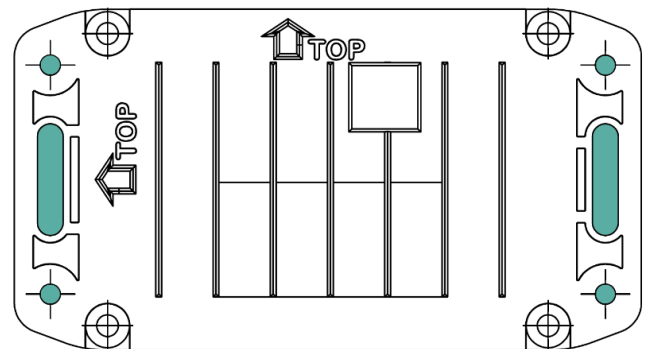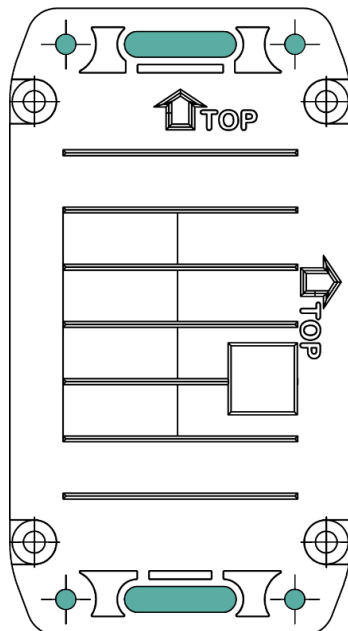

Fixing holes and oblongs

START-UP

Please make sure the LoRaWAN settings of your **ACS-Report-NOTE** (DevEUI, AppEUI, AppKey) are filled in with your preferred LoRaWAN operator.

- 1 Put a magnet on the QRCode label of the **ACS-Report-NOTE**



- 2 The LED of the **ACS-Report-NOTE** starts blinking red slowly for 3s and then blinks quickly



- 3 Wait until the LED starts blinking slowly again to remove the magnet. The **ACS-Report-NOTE** starts its installation



If joined successfully, the LED will blink **green** for 5s.
Otherwise it will blink **red**.



Once installed on your LoRaWAN network, the device will push its payload.

Please refer to the Technical Documentation for the device settings and commands.

INS-PLAYER APPLICATION/ INS-BLUEREAD MODEM

Android mobile app: www.ineo-sense.com/downloads/INS-Player_v1.apk

Our application and its **ACS-Report-NOTE** enable the configuration and setting of your device through our Bluetooth/LoRa handheld modem. Please refer to the documentation of the INS-Player mobile application.

